
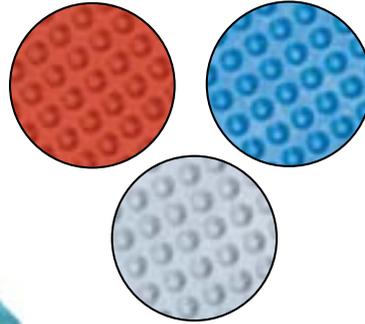


**The Ergomat Hygiene is made of premium rubber and is designed to increase comfort while reducing tripping hazards, body aches, quality issues, and sick leaves. This is the greatest mat for high cleanability.**

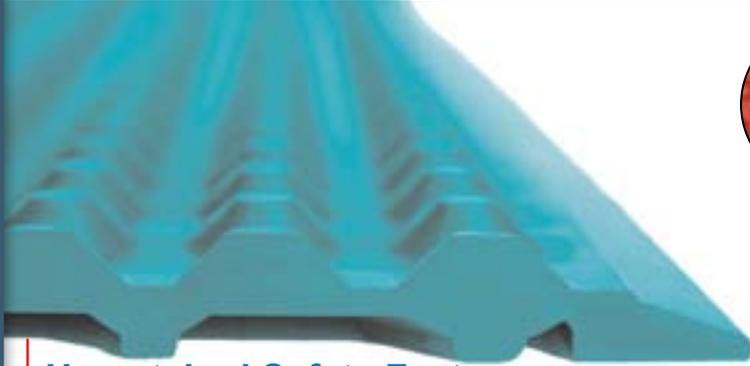

### Unmatched Safety Features

- Molded beveled edges
  - They will never curl up, eliminating tripping hazards
- Any size, any shape mat, always in one piece
  - No overlapping or worn-out connecting mats, also eliminating tripping hazards

### Highest Quality

- Virgin raw material only
  - Unbeaten durability and ergonomic relief
- Not only anti-fatigue, but also true ergonomic benefits
  - Unique ergonomic designs, eliminating and preventing common problems encountered in standing environments stimulating the body to increase blood circulation and alertness that will reduce sick leave, workers' compensation and quality issues.
  - Solid mat throughout; no hollow bubbles that collapse

### The Hygiene Advantage

- Can be autoclaved (2'x3' only) at 100°C for up to 5 minutes
- Frequent washes will not affect the state of the mat; no curling up, swelling or expanding
  - No loss of the ergonomic properties and no tripping hazard
- Meets USDA / CFIA standards
- Silicone & latex-free
- Choice of 4 colors (Green, Grey, Blue & Red)
  - Cross-contamination risks are prevented
- Cleanroom ISO Class 5 (100)

Complies to USDA and CFIA standards/guidelines.

## 3-Year Warranty

All Ergomat product lines are conditionally warranted against normal usage\* 24 hours a day, 7 days a week. The warranty does not cover damage caused by the mat being dragged or pulled from a heavy load or items being pushed or dragged across the product, such as skids or pallets. The warranty against chemicals, oils, liquids, or other matter differs with the type of mat. Please consult your dealer or an Ergomat Rep to select the correct mat for your environment. The warranty periods starts from the date of purchase. The warranty only covers the replacement of the product, no direct or indirect costs are covered.

\* It is considered normal usage when a person stands or walks on the Ergomat with regular footwear in an environment where the temperature is under 25° C (77° F) and the humidity is below 80%.

For a nominal additional charge, this mat can be supplied with yellow bevels, and/or holes for drainage and air flow.

**ERGOMAT® Hygiene**



www.ergomat.com - info@ergomat.com

US: +1-440-282-4651  
 English (EU): +44 03308 280 084  
 Scandinavia: +45 70 22 18 40  
 German: +49 9524 30367-50  
 French: +33 1 446 410 28  
 Dutch: +31 73 613 05 30



MATTING



DURASTRIPE



FURNITURE



FIRST AID



FACILITY SAFETY



LED SOLUTIONS

Properties	Standard	 <b>Hygiene</b>
<b>Material</b>		EPDM
<b>Color</b>		Green, Grey, Blue & Red
<b>Weight</b>		3500 g +/- 50 g // 7.7 lbs +/- 1.75 oz
<b>Length without beveled edges</b>		91.4 cm +/- 1% // 36" +/- 1%
<b>Width without beveled edges</b>		60 cm +/- 1% // 23.63" +/- 1%
<b>Thickness</b>		11 mm // 0.43"
<b>Density</b>	ISO 2781	1250 kg/m <sup>3</sup>
<b>Hardness</b>	ISO 868	50-60 Sh A
<b>Electrical Resistance Surface point to point % 50 RH</b>	IEC-61340 4-1/ ESD STM7.1-2001	>1 x 10 <sup>10</sup> W
<b>Thermal properties</b> Minimum use Maximum use Maximum short duration	The ergonomic properties remain	-40°C // -40°F 120°C // 248°F 600°C // 1112°F
<b>UV-resistance</b>		Good
<b>Cleanroom application</b>	EN ISO - 14644-1	ISO Class 5 (100)
<b>Warranty</b>		3 years

## Resistancy Chart

<b>Outside</b>	Good
<b>Mineral Oils</b>	Bad
<b>Vegetable Oils</b>	Depending on concentration
<b>Coolants</b>	Bad
<b>Bases</b> pH: 7- 9,5 pH: 9,5-14	Good Good
<b>ACID</b> pH: 2-7 pH: 1-2 pH: < 1	Good Good Bad
<b>Alcohol</b>	Good
<b>Disinfectant Liquids</b>	Good but depending on concentration
<b>Thinners</b>	Bad / Depending
<b>Water and chlorine</b>	Good
<b>Halogenated Organic</b>	Bad
<b>Softeners</b>	Bad
<b>Acetates and Aldehydes</b>	Depending
<b>Acetone</b>	Good

This chart is based on regular and prolonged exposures to the chemicals and liquids listed.

A rating of depending indicates that the performance of this mat will depend on specific chemical exposures and concentrations.

A bad rating is based on continuous and prolonged exposures to the listed chemicals. In situations where possible exposures are infrequent, limited in volume, and are immediately cleaned up, the resistance of the mat in this environment would likely be acceptable.

When in doubt, please contact Ergomat at [info@ergomat.com](mailto:info@ergomat.com), or:

**US:** +1-440-282-4651  
**English (EU):** +44 03308 280 084  
**Scandinavia:** +45 70 22 18 40  
**German:** +49 9524 30367-50  
**French:** +33 1 446 410 28  
**Dutch:** +31 73 613 05 30